

How to change a fuse.



1. Turn of the switch
(Position 0)
2. Press the black drawer
down and pull out.
3. Take out the fuse
(it can be warm)

